

Smokette Storage Cart & Stand (SC001)

Assembly & Mounting Instructions


Parts supplied: (2) PV161 Caster with brake, (2) PV162 Caster and (4) PV231 Thumbscrew 10-32, (4) PV154 Flat Washer 3/4 x 1/4", (4) PV219 Bolt 5/16x3/4", (4) PV150 Lock washer 5/16"

TOOLS REQUIRED: 1/2" wrench

NOTE: This procedure requires lifting the smoker onto the top of the storage cart and will require two people. Also, the storage cart should be stabilized on a level surface to guard against tipping or rolling during the procedure.

PROCEDURE:

1. Screw casters in bottom rail of cart making sure that the two casters with brakes are in the front.
2. Level by adjusting the leveling nuts on the casters up or down until the cart is level.
3. Place the Smokette on top of the cart with the front of the smoker to the front of the cart.
4. Precisely align mounting holes in Smokette with respective pre-drilled holes in top of cart. This will require opening the door and working from inside the cart. *Use the pre-drilled slots to connect the "rail type" smoker or the pre-drilled round holes for the individual legs on Smokettes built before March 2007.*

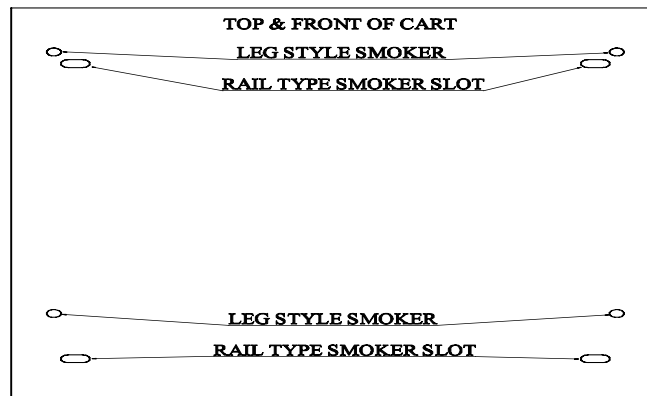

5. From inside the storage cart, insert the thumbscrew and flat washer through the pre-drilled hole into the threaded adapter in each leg OR insert the 5/16x3/4" bolt and lock washer through the pre-drilled slot into the weld zert in the bottom of Smokette rail. *Do not fully tighten the first bolt you thread in place because you will need to adjust the smoker's position to properly line up the remaining three.*
6. When all four bolts are temporarily threaded into the adapters, tighten each one securely.

Your Cart is now ready to use.